





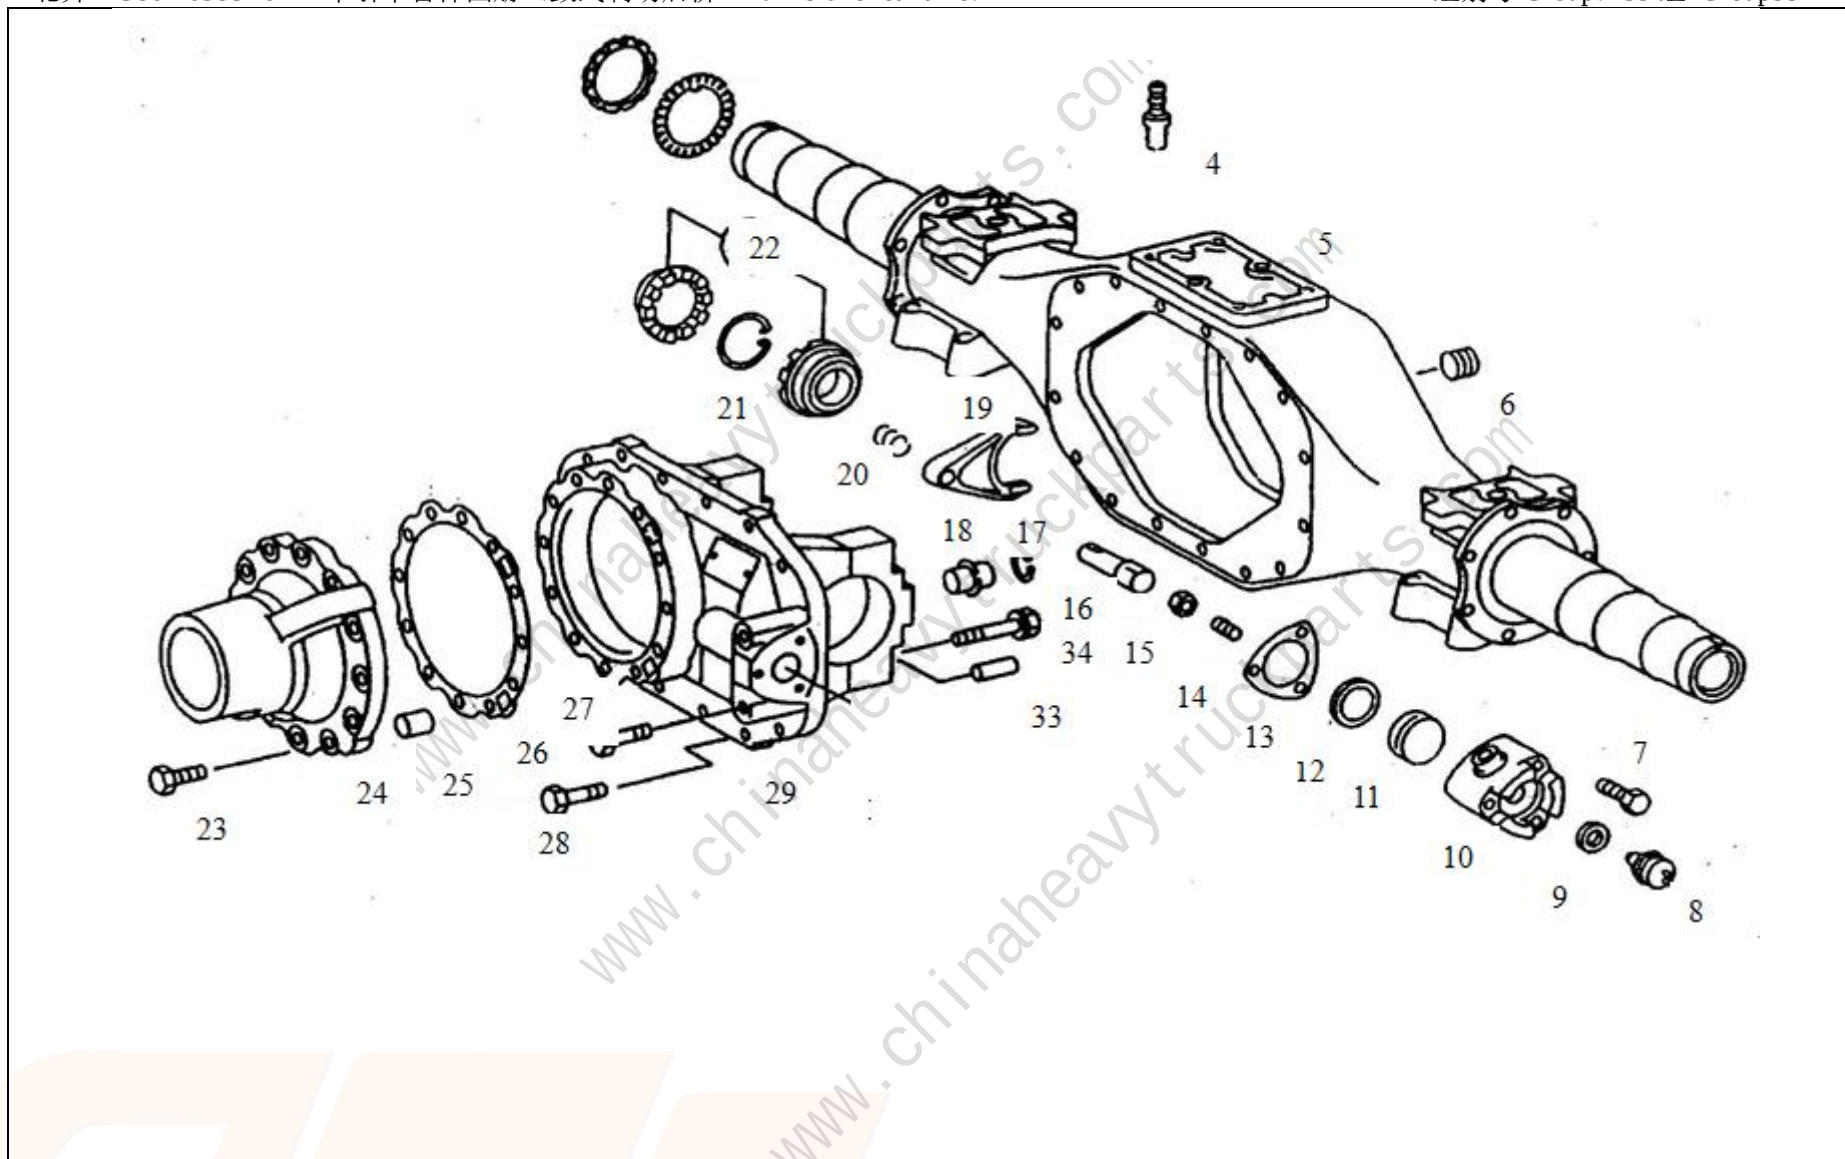

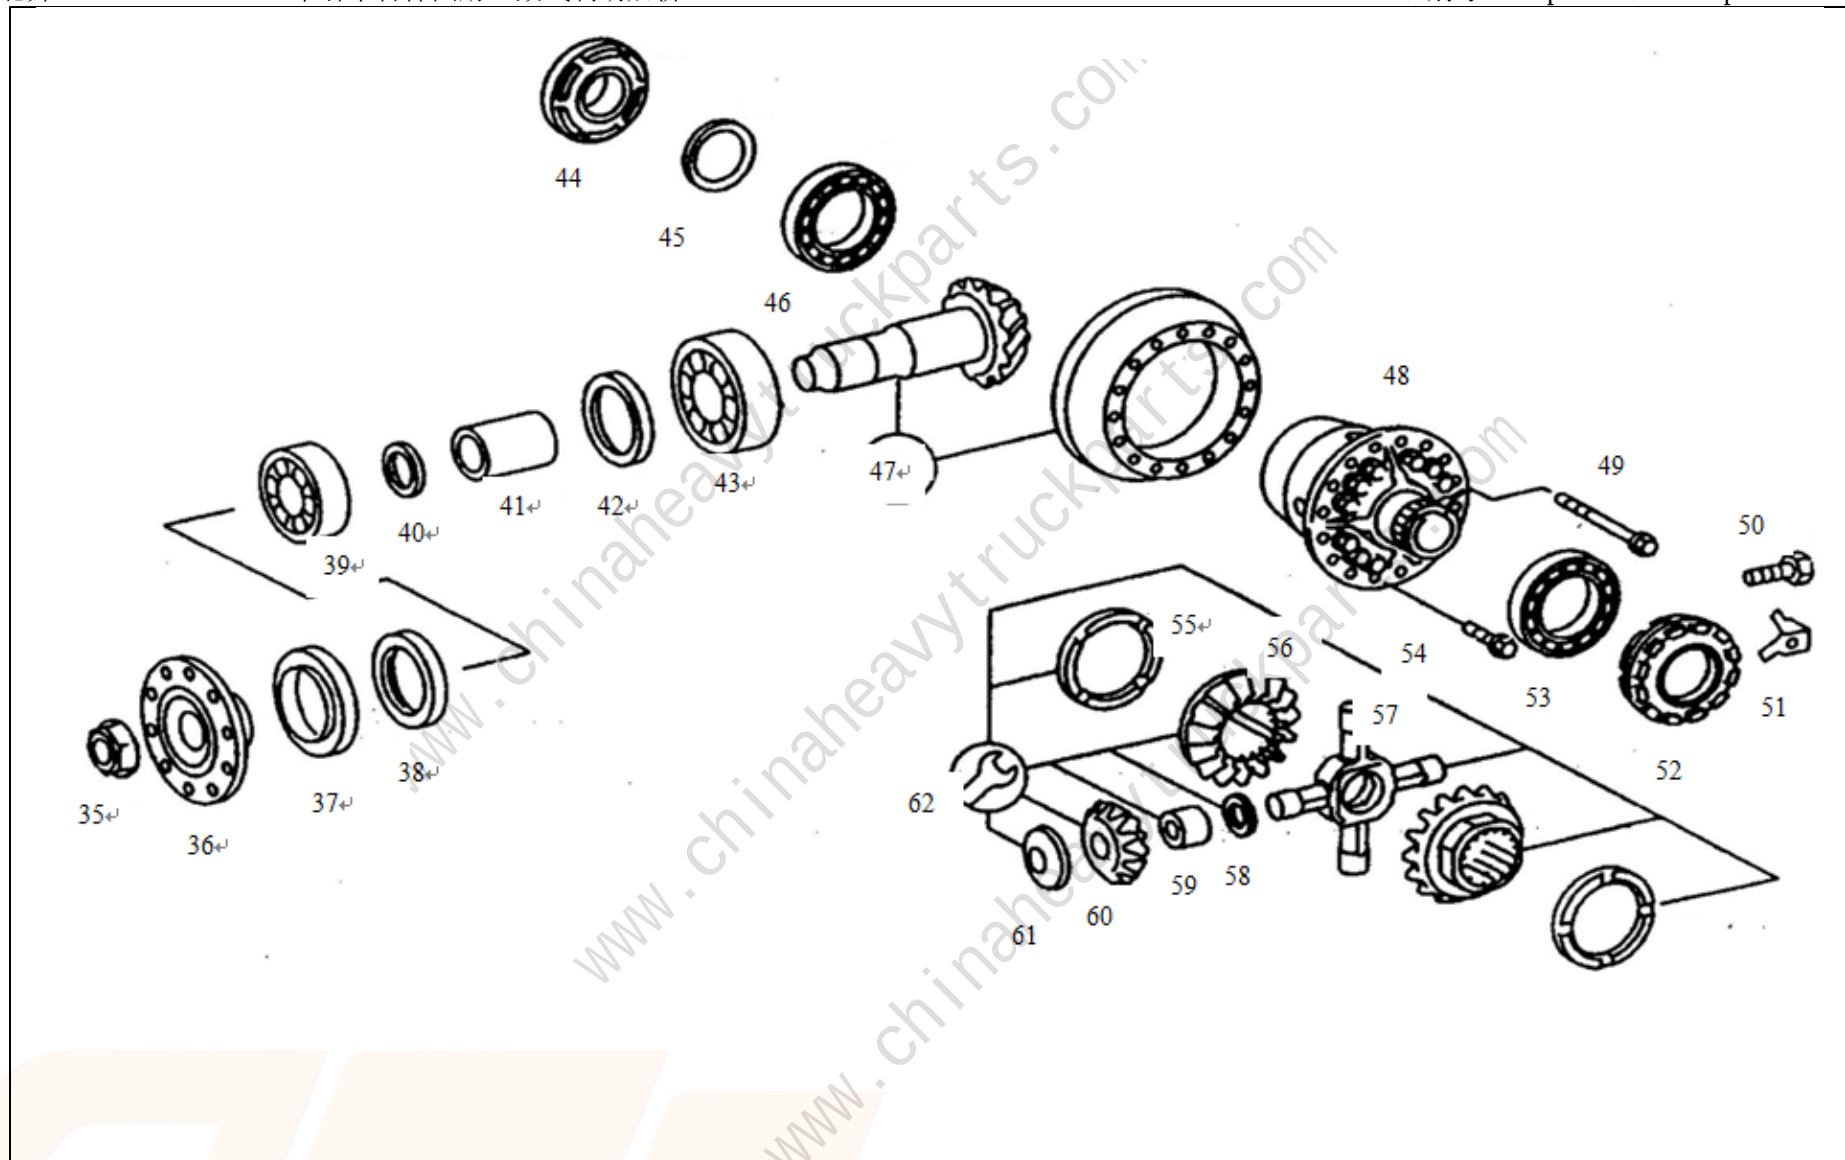

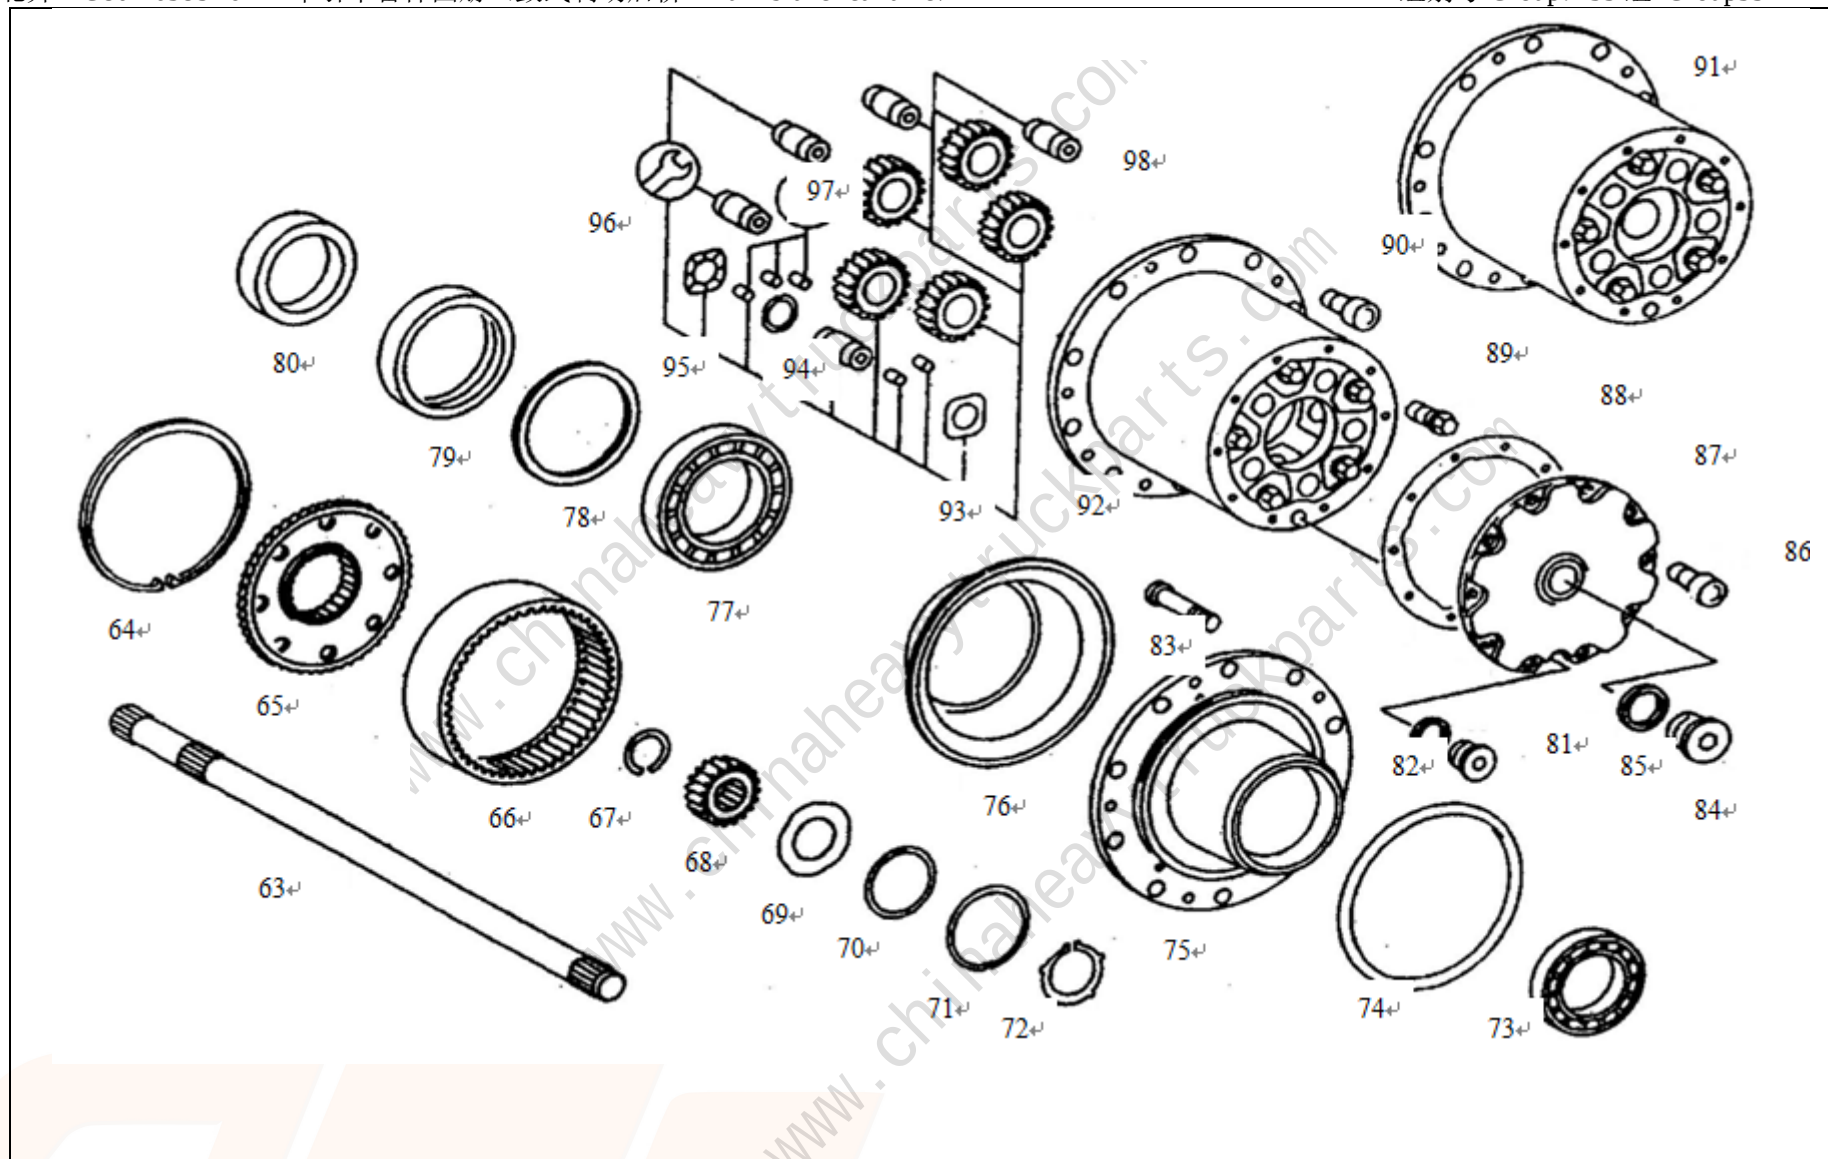

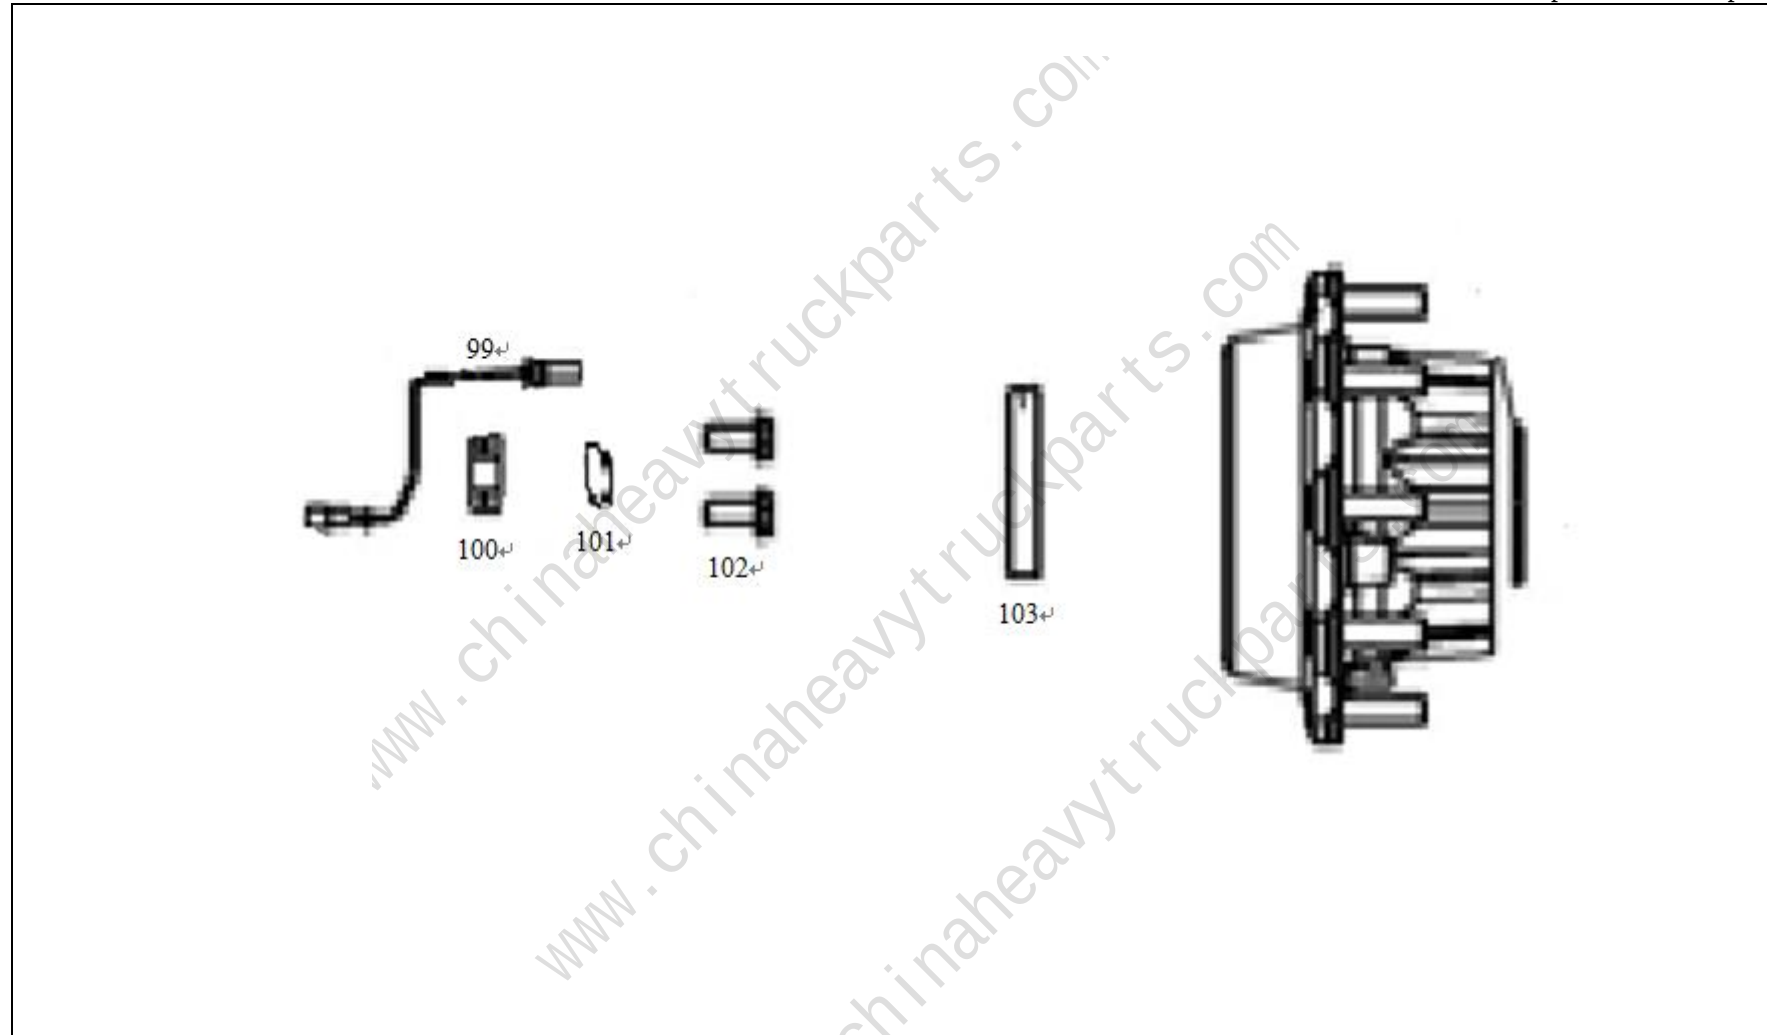


图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
1	后桥总成	Rear axle assembly	813 350 00 00	1			
2	主减总成	Main retarder assy	500 350 46 20	1			
3	型号标牌	Model board	505 584 13 24	1			
4	通气塞	Plug	383 351 00 65	1			
5	桥壳总成	Axle housing assy	815 350 00 20	1	桥壳 815 351 00 01		
6	螺塞	Screw plug	186 997 00 32	1			
7	六角螺栓	Bolt	M 105782 008114	3			
8	压力开关	Press switch	001 545 47 14	1			
9	密封环	Seal ring	N007603 018100	1			
10	工作缸	Working cylinder	346 353 06 55	1			
11	工作缸活塞	Piston	346 353 01 57	1			
12	工作缸活塞"O"形环	O ring	001 997 22 45	1			
13	密封垫	Seal washer	355 353 03 80	1			
14	螺纹销钉	Screw	M 100073 010131	1			
15	六角螺母 M10-04	Nut	M 106172 010001	1			
16	换挡滑杆	York rod	346 353 05 35	1			
17	卡环	Snap ring	N912009 025100	2	总成: 355 350 00 55		
18	销	Pin assembly	355 351 03 74	2			
19	差速拨叉	Fork	346 353 02 34	1			


图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
20	压簧	Press spring	346 993 09 01	1			
21	钢丝环	Elastic check ring	352 994 00 39	1			
22	差速锁端面齿套	Differential gears leeve	346 353 00 39	1			
23	螺栓	Bolt	M 105786 014031	12			
24	小齿轮壳	Small gear shell	346 353 04 07	1			
25	密封环	Seal ring	002 997 61 40	1			
26	调整垫	Adjusting shim	346 353 09 52-14 52-16 52	1			
27	螺栓	Bolt	000 990 63 04	2			
28	螺栓	Bolt	000 990 62 04	18			
29	带轴承盖的主减速 器壳总成	Differential housing	395 350 46 20	1			
33	圆柱销 8X16	Column pin	100119 080029	4			
34	螺栓	Bolt	942 990 16 04	4			
35	12 方螺母	Nut	385 351 05 72	1			
36	法兰	Flange assy	346 353 15 45	1	总成 346		
37	护罩	Protective cap	346 353 00 90	1	350 11 45		
38	挡油盘	Oil splasher	346 353 14 29	1			
39	圆锥滚子轴承	Roller bearing	003 981 29 05	1			
40	调整垫	Adjusting shim	346 353 13 77— 94 77	+	346 353 09 51- 29 51		
41	隔套	Spacer sleeve	346 353 04 53	1			
42	密封环	Oil seal	021 997 59 47	1			

图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
43	圆锥滚子轴承	Roller bearing	003 981 06 05	1			
44	螺纹环总成	Thread ring	346 353 07 25	1	总成 346 350 04 43		
45	挡油盘	Oil splasher	346 353 00 29	1			
46	圆锥滚子轴承	Roller bearing	003 981 32 05	2			
47	从动锥齿轮	Drived gear	346 353 50 12	1	总成 346 350 40 39		
	主动锥齿轮	Main driving gear	346 353 50 10	1			
48	不带齿轮的差速器 总成	Differential assy	346 350 81 23	1			
49	螺栓	Bolt	000 990 67 04	12			
50	六角螺 M8X12-8.8	Bolt	M 105783 008044	2			
51	锁紧件	Retainer	346 333 00 73	2			
52	螺纹环	Thread ring	652 353 00 25	1			
53	圆锥滚子轴承	Roller bearing	003 981 32 05	1			
54	螺栓	Bolt	346 990 31 01	16			
55	止推垫圈	Thurst washer	346 353 22 62	2			
56	半轴齿轮	Half shaft gear	346 353 08 15	2			
57	差速器十字轴	Cross joint	346 353 04 20	1			
58	止推环	Thrust ring	346 353 32 51	4			
59	衬套	Bush	545 353 01 50	4			
60	差速锥齿轮	Gear	346 353 19 14	4			
61	球面垫圈	Sphere shim	346 353 01 24	4			
62	全套差速器总成	Differential assy	398 350 03 23	1			

图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
63	后桥半轴	Rear axle half shaft	030 357 04 01	1			
	后桥半轴	Rear axle half shaft	030 357 05 01	1			
64	钢丝环	Elastic check ring	346 994 04 39	2			
65	托架	Bracket	355 354 18 09	2			
66	齿圈	Gear ring	346 354 37 12	2			
67	卡环	Snap ring	N009045 050001	2			
68	太阳齿轮	Sun gear	346 354 41 17	2			
69	止推垫片	Washer	346 354 16 62	4			
70	补偿垫圈	Compensated washer	355 354 05 52-08 52、498 354 01 52	+	按需		
71	弹性挡圈	Spring gasket	M 100893 105001	2			
72	弹性挡圈 45X1.75	Spring gasket	N000983 045000	2			
73	圆锥滚子轴承	Roller bearing	545 981 00 05	2			
74	O型密封圈	O ring	016 997 95 48	2			
75	轮毂	Hub	030 356 02 01	2			
76	挡油盘	Oil splasher	505 356 00 82	2			
77	圆锥滚子轴承	Roller bearing	005 981 21 05	2			
78	盖板	Cover	346 356 00 27	2			
79	径向轴密封环	Oil seal	020 997 39 47	2	左绿右棕		
80	止推环	Thrust ring	346 356 14 15	2			
81	螺塞	Screw plug	624 997 00 32	2			
82	密封环 24X29	Seal ring	N007603 024106	2			
83	轮子固定螺栓	Bolt	500 401 00 71	20			

图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
84	螺塞	Screw plug	355 997 02 32	2			
85	密封环 45X52	Seal ring	N007603 045100	2			
86	螺栓	Bolt	500 990 64 04	20			
87	端盖	End cover	624 356 00 20	2			
88	密封垫	Seal washer	650 356 00 80	2			
89	配合螺栓	Bolt	624 354 00 71	10			
90	螺栓	Bolt	N 000912 012219	10			
91	行星减速器总成	Planetary reducer assembly	030 350 00 09	2			
92	带行星框架的钟形 毂总成	Bell hub assy	030 350 00 33	2			
93	止推垫片	Washer	346 354 13 62	20			
94	中间垫片	Washer	355 354 01 62	20			
95	止推垫片	Washer	346 354 16 62	2			
96	销	Pin	030 354 00 74	10			
97	滚针	Roller needle	030 981 00 87	500			
98	行星齿轮	Planetary gear	346 354 40 16	10			
99	ABS 传感器	ABS SENSOR	500 541 06 01	2			
100	ABS 保持架	ABS STABILIZER	500 351 01 16	2			
101	垫圈	Washer	M 100093 006000	4			
102	螺栓	Bolt	M 105783 006103	4			
103	齿圈	ABS RING GEAR	500 354 00 24	2			

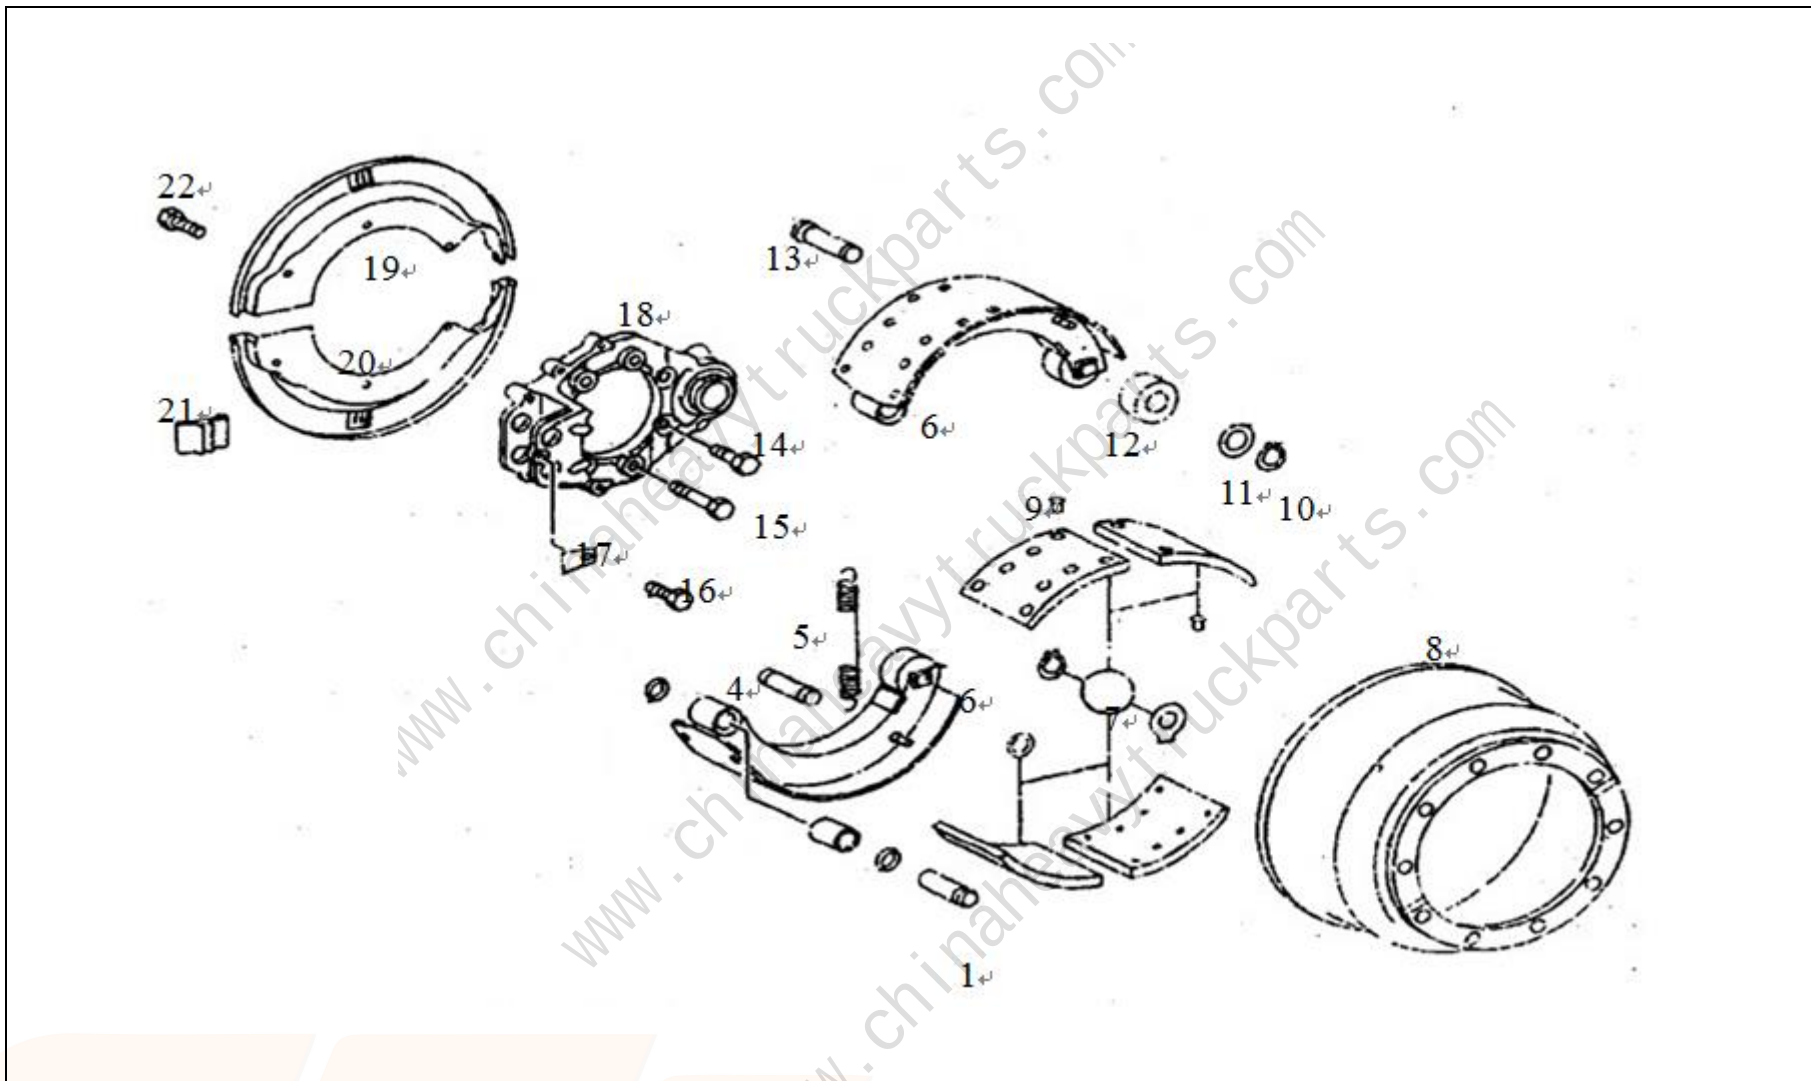

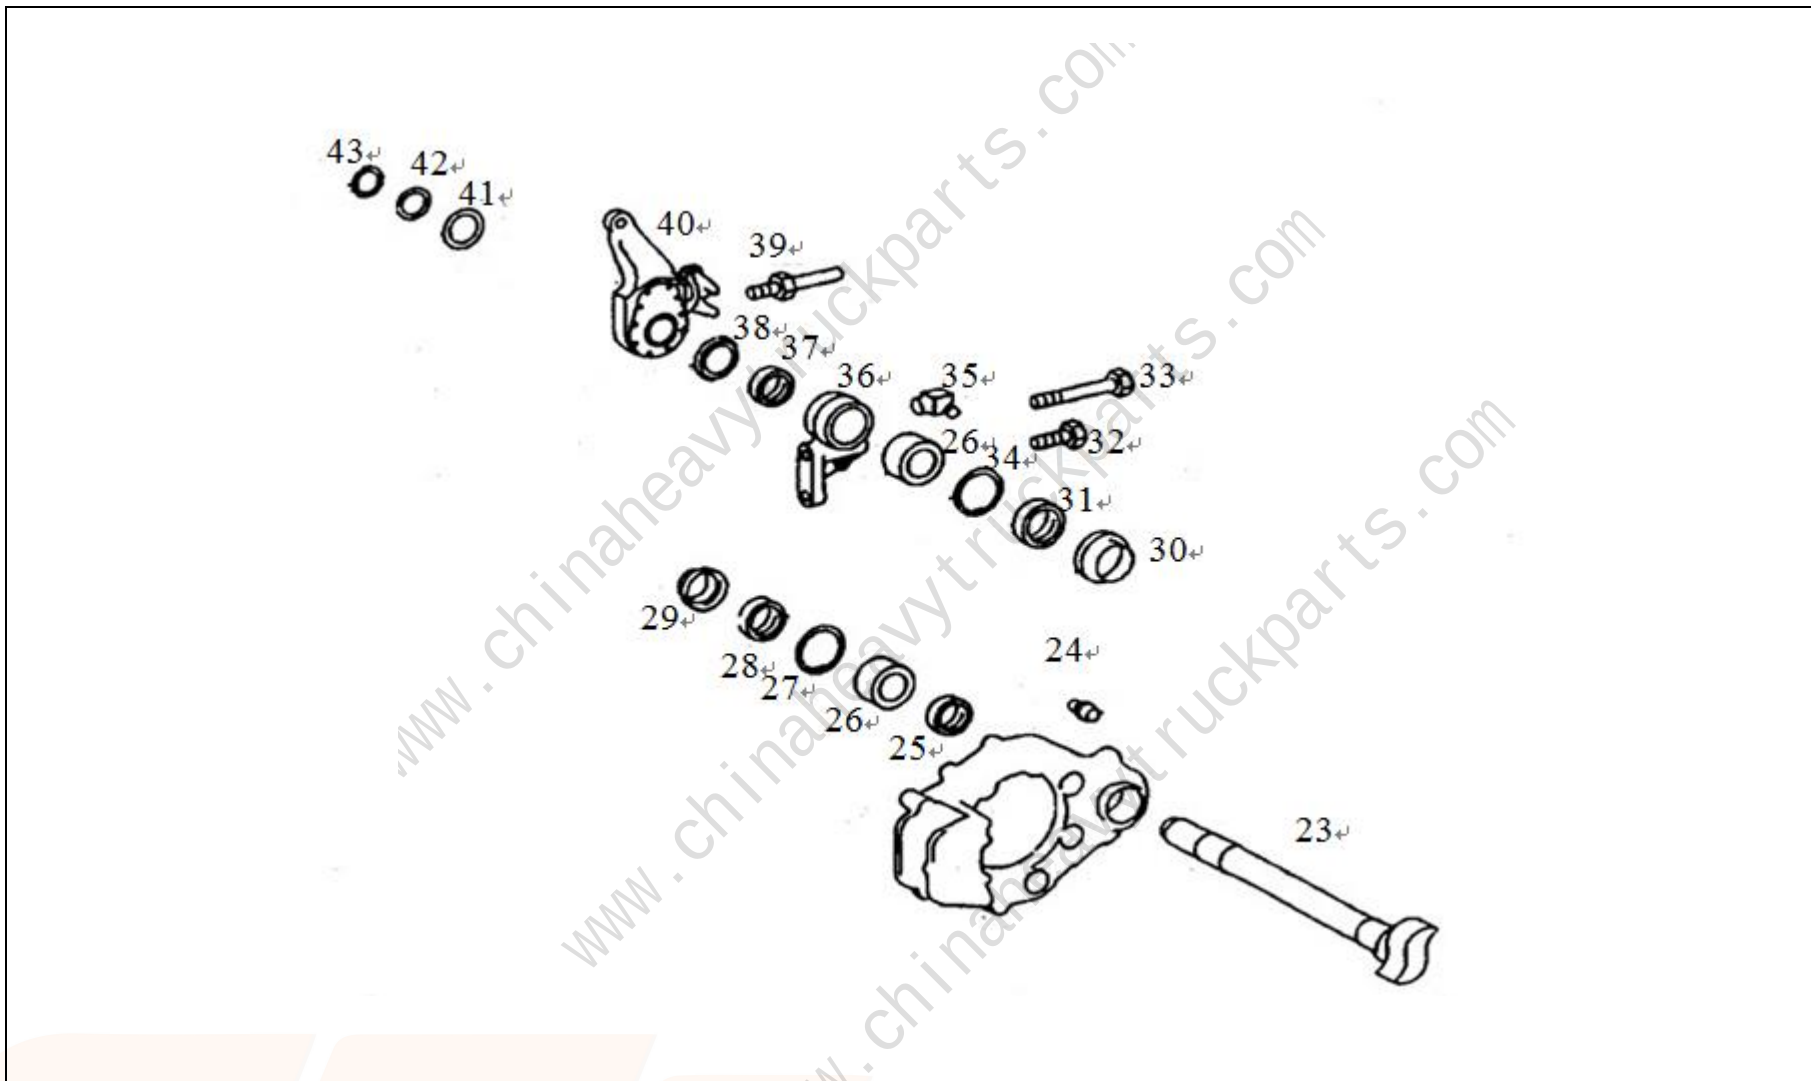

图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
	带护板的制动器总成	Brake assy with board	505 420 02 02				
1	销	Pin	497 421 00 74	4			
2	衬套	Bush	674 421 00 50	4			
3	制动蹄销密封环	Seal ring	003 997 69 48	8			
4	销	Pin	658 423 02 74	4			
5	回拉弹簧	Return spring	346 993 03 10	4			
6	制动蹄片	Brake shoe	659 423 05 10	4			
7	制动蹄	Brake shoe	659 423 02 08	8			
8	制动鼓	Brake drum	505 423 04 01	2			
9	铆钉	Hollow rivet	500 990 00 97	64			
10	弹性挡圈	Spring gasket	M 100894 017001	4			
11	垫圈	Washer	N 000988 017100	4			
12	辘子总成	Column	346 420 00 39	4			
13	销	Pin	346 421 06 74	4			
14	带肩螺栓	Bolt	346 990 13 04	4			
15	带肩螺栓	Bolt	346 990 43 04	20			
16	螺栓 M10X16-10.9	Bolt	N 910106 010037	2			
17	止动垫片	Lock sheet	942 994 00 09	2			
18	制动蹄支承架	Brake shoe bracket	505 423 00 06	2			
19	护板	Brackplate	505 423 01 20	2			
20	护板	Backplate	505 423 00 20	2			
21	塞堵	Plug	346 421 00 11	4			
22	螺栓	Bolt	972 990 01 04	12			

图册 编号 ID#	零件名称 Part Name Chinese	英文名称 Part Name English	零件号 Part Number	基数 Quantity	备注 Notes	外廓尺寸 (mm)	重量 (kg)
23	左制动凸轮轴	Left brake camshaft	260 423 01 36	1			
	右制动凸轮轴	Right brake camshaft	260 423 02 36	1			
24	注油嘴 M8X1	Nozzle	N 071412 008100	2			
25	轴密封圈	Oil seal	012 997 36 47	2			
26	关节轴承	Bearing	000 981 60 31	2			
27	弹性挡圈	Spring gasket	307 994 00 35	2			
28	关节轴承	Bearing	000 981 60 31	2			
29	轴密封圈	Oil seal	014 997 22 47	2			
30	密封环架	Seal ring bracket	346 423 00 58	2			
31	轴密封圈	Oil seal	014 997 22 47	2			
32	螺栓	Bolt	N 910106 016010	2			
33	螺栓	Bolt	N 910106 016011	2			
34	弹性挡圈	Spring gasket	307 994 00 35	2			
35	注油嘴 M8X1	Nozzle	N 071412 008200	2			
36	左支承座	Left dearing base	511 423 01 33	1			
	右支承座	Right dearing base	511 423 02 33	1			
37	轴密封圈	Oil seal	012 997 36 47	2			
38	垫圈	Washer	346 423 07 52	2			
39	销子	Nut	389 423 50 74	4			
40	自动的制动间隙调整器	Brake adjusting arm	945 420 02 38	1			
	自动的制动间隙调整器	Brake adjusting arm	945 420 03 38	1			
41	调整垫	Adjusting shim	346 421 05 52-07 52-09 52	+	按需		
42	垫片	Washer	346 421 10 52	2			
43	弹性挡圈 34X1.5	Spring gasket	N000-+99+1471 034000	2			