



喷油泵总成 Fuel pump assembly

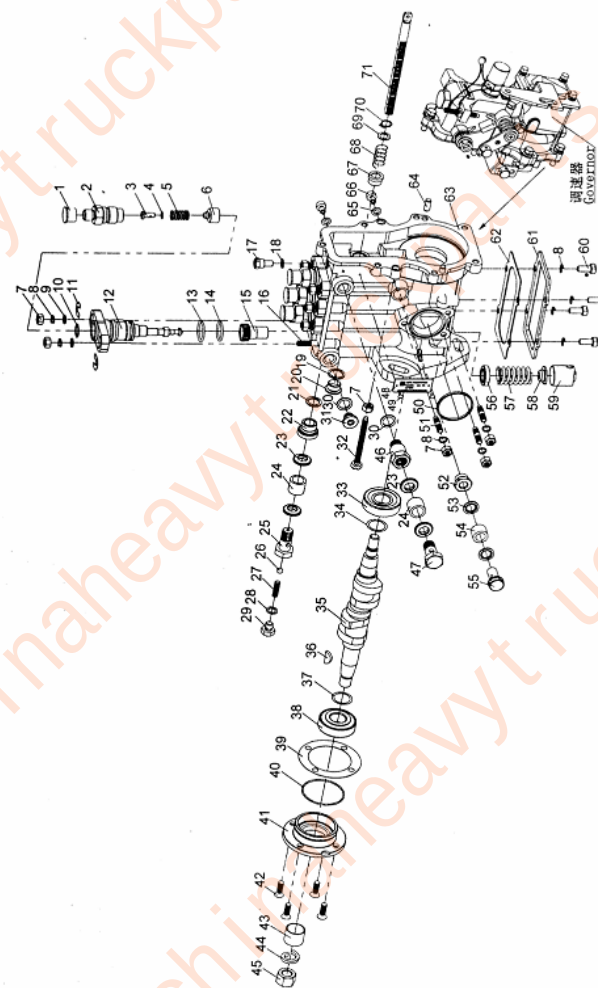

498BT-3-11 10.11-喷油泵总成 OIL INJECTION PUMP ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	B1-2	防污帽	PROTECTION CAP	4	2011-11_
10	B4QA003.2-03	邮油阀垫圈	WASHER FOR DELIVERY VALVE	4	2011-11_
11	B4Q001-02	预行程调整垫片	ADJUSTBLE WASHER	999	2011-11_
12	X119A.0	柱塞偶件	PLUNGER PARTS	4	2011-11_
13	B4Q001.2-08	O型橡胶密封圈-II	SEAL-II	4	2011-11_
14	B4Q001.2-10	O型橡胶密封圈-IV	SEAL-IV	4	2011-11_
15	B4QA003-01	调节齿圈	ADJUSTBLE GEAR	4	2011-11_
16	B4Q001.1-04	双头螺柱	8.8-A3L STUD	8	2011-11_
17	B4Q001-20	放气螺钉	DEFLATION SCREW	1	2011-11_
18	B4Q001-25	垫圈	WASHER	1	2011-11_
19	B4Q001-16	齿杆罩帽	THROTTLE LEVER CASE	1	2011-11_
2	B4QA003.2-01	出油阀紧座	OIL OUTLET VALVE SEAT	4	2011-11_
20	B4Q001-17	垫圈	WASHER	1	2011-11_
21	B4QA003.1-02	垫圈	WASHER	1	2011-11_
22	B4QA003.1-01	进油接头	OIL INLET JOINT	1	2011-11_
23	B4Q001-18	组合垫圈	COMBINED GASKET	4	2011-11_
24	B4Q001-19	防污圈	PROTECTION WASHER	2	2011-11_
25	B4Q001.6-04	回油接头螺钉	FUEL BACK CONNECTION SCREW	1	2011-11_
27	B4Q001.6-03	回油阀弹簧	SPRING	1	2011-11_
28	B4Q001.6-02	垫圈	WASHER	1	2011-11_
29	B4Q001.6-01	螺钉	SCREW	1	2011-11_
3	B4QA003.2-02	减容体	SPINDLE	4	2011-11_
30	B4Q001.1-02	垫圈	WASHER	2	2011-11_
31	B4Q001.1-03	油道螺塞	FUEL PIPE PLUG	1	2011-11_
32	B4Q001-23	怠速限位螺钉	FIXING PIN	1	2011-11_


喷油泵总成 Fuel pump assembly

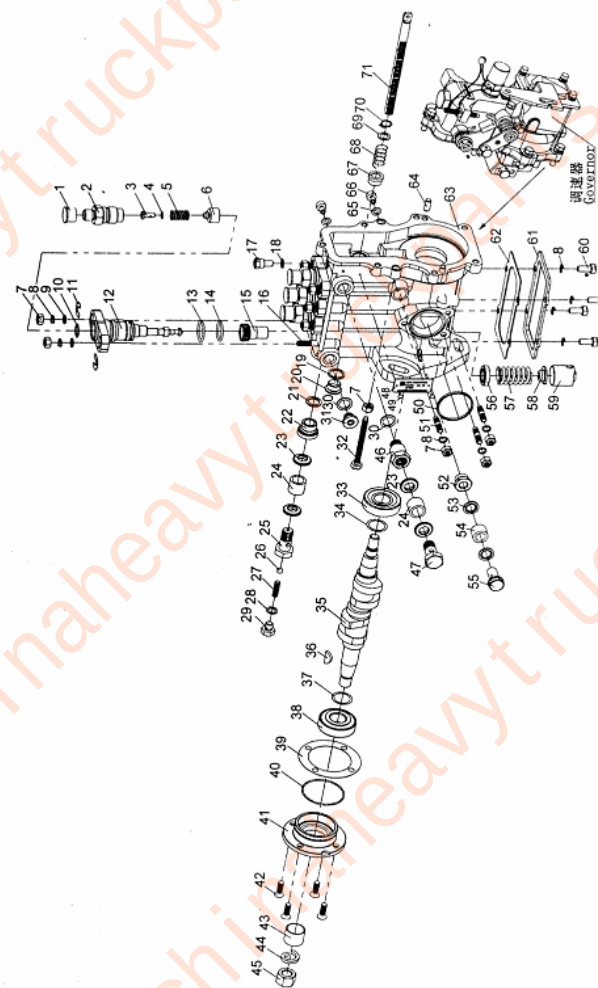

498BT-3-11 10.11-喷油泵总成(续)

标号 No.	代号 Code	名称 Description	数量 Quantity	备注 Remark
32	B4Q001-23	怠速限位螺钉	1	2011-11_
34	B4Q001.4-01	凸轮轴调整垫片	999	2011-11_
35	B4QA001.4-02	凸轮轴	1	2011-11_
37	B4QA001.4-01	凸轮轴调整垫片	999	2011-11_
39	B4QA001-04	轴承盖调整垫片	999	2011-11_
4	B4Q001.2-03	出油阀调整垫圈	999	2011-11_
40	B4QA001.5-01	O型橡胶密封圈	1	2011-11_
41	B4QA001.5-02	轴承盖	1	2011-11_
43	B4QA001-05	保护套	1	2011-11_
46	B4Q001.1-01	进回油接头	1	2011-11_
47	B2-2	进油管接螺栓	1	2011-11_
48	X4BQA85Y022H	标牌	1	2011-11_
5	B4Q001.2-04	出油阀弹簧	4	2011-11_
50	B4Q001-01	输油泵密封圈	1	2011-11_
51	B4Q001.1-06	双头螺柱	3	2011-11_
52	B4Q023.1-02	润滑油接头	1	2011-11_
53	B4Q023-02	组合垫圈	2	2011-11_
54	B4Q023-04	防污圈	1	2011-11_
54	B4Q023-04	防污圈	1	2011-11_
55	B4Q023-03	进回油螺钉	1	2011-11_
56	B4Q001-07	柱塞弹簧上座	4	2011-11_
57	B4QA001-02	柱塞弹簧	4	2011-11_
58	B4Q001-09	柱塞弹簧下座	4	2011-11_
59	B4QA001.3-01	挺柱体部件	4	2011-11_
6	F21.0	出油阀偶件	4	2011-11_

喷油泵总成 Fuel pump assembly

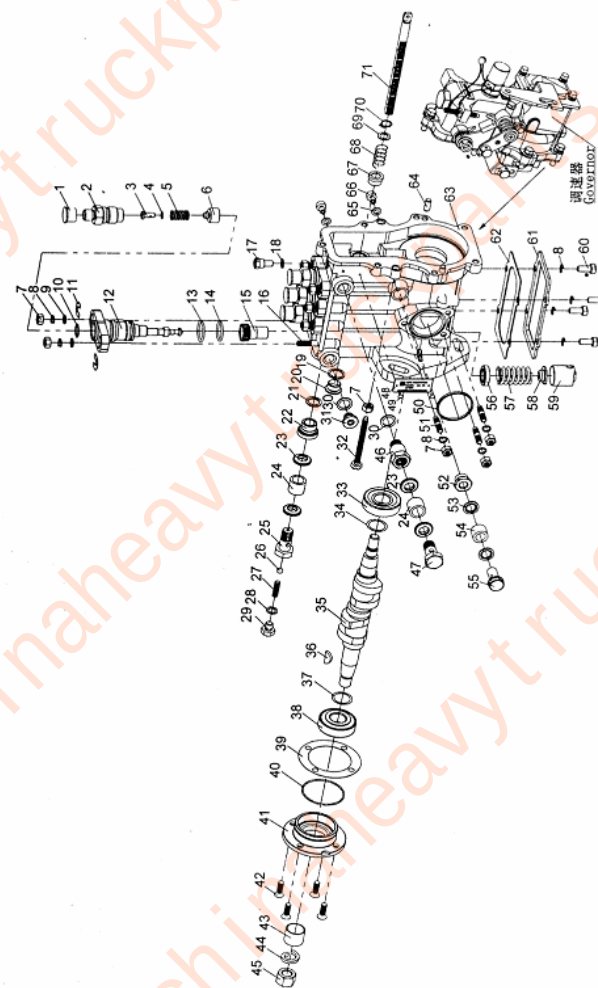

498BT-3-11 10.11-喷油泵总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
61	B4Q001-13	底盖板	COVER;UNDER	1	2011-11_
62	B4Q001-12	底盖板密封垫	PLATE SEAL	1	2011-11_
62	B4Q001-12	底盖板密封垫	PLATE SEAL	1	2011-11_
63	B4QA003.1-03	泵体	PUMP BODY	1	2011-11_
64	GB119-1986	圆柱销 D5x12	PIN D5X12	2	2011-11_
65	B4Q001-11	垫圈	WASHER	5	2011-11_
66	B4Q001-10	定位螺钉	LOCATING SCREW	5	2011-11_
67	B4Q001.1-07	齿杆衬套	TOOTH LEVER BUSH	1	2011-11_
68	B4Q001-21	回位弹簧	RETURN SPRING	1	2011-11_
69	B4Q001-22	回位弹簧挡圈	RING	1	2011-11_
71	B4Q001-06	齿杆	TOOTH LEVER	1	2011-11_
9	B4Q001-04	垫圈	WASHER	8	2011-11_